Operation:

1.Power Button:
Press and release the power button, then the unit will continue working for the next 10 seconds.
2.Light Indicator:
If the light indicator turns on, please replace the batteries.

Specification:

Fits any door:43-72mm (1.69"-2.83") thick
Fits any barrel hole: 14-22mm
Sensor: 0.3 Mega Pixel CMOS
LCD screen: 3.5" TFT
Power source: 4 AA Batteries
Size: 135(W)x85(H)x24.5(D)mm
Weight: 350g

Digital Door Viewer
User Manual

Attention :

1.Please read the instruction manual before use.
2.DO NOT disassemble the camera or the mainbody.
3.Handle with care.
4.Please unscrew both screws from the bottom of the digital door viewer, take out the base flange and take off the paster on it and prepare to install.

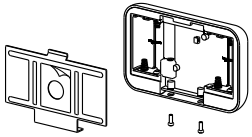

Battery:

Dispose the used batteries appropriately, DO NOT bury or burn the batteries and keep them away from children. DO NOT swallow. DO NOT re-charge or disassemble the batteries.

Package Contents:

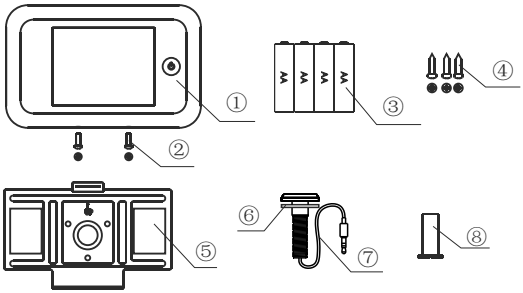

①Digital door viewer ②Locking screws 2pcs
③4 AA batteries ④Chipboard screws
⑤Base flange ⑥Antiskid washer
⑦Peephole lens ⑧Peephole barrel

Before installation:

Prior to mounting the peephole viewer, please make sure you have installed the batteries included.

Installation:

1. Replace the existing door viewer or drill a 14mm hole in the door at eye level. Insert the camera from the outside while inserting the washer between the back of the lens and the door. Make sure that the arrow mark on front of the camera points upwards.

2. Fit the holding plate over the end of the lens then screw the locking barrel on to the threaded part of the camera and tighten, this will hold the plate to the door. You can then secure the plate with 2 or 3 screws (provided). Make sure that the arrow on the plate points upwards.

3. The single wire should be connected to the socket in the back of the screen,excess wire should be attached behind the small hook.

4. Hook the screen over the bracket at the top of the plate and secure with two small bolts through the holes in the bottom of the screen case.